


# Installation Guide - GreaseShield®3000-DW



- 1 **GS3000-DW Unit:** Ensure that there is sufficient clearance above and to the right of the unit for servicing purposes (5.9"/150mm minimum).
- 2 **Inlet Pipe – 2"/54mm:** To be piped with a sufficient fall of no less than 1 in 40.
- 3 **Outlet Pipe – 3"/76mm:** To be piped with a sufficient fall of no less than 1 in 40.
- 4 **Pre-Filter:** Ensure sufficient height above the Pre-Filter to allow for removal and daily maintenance of Pre-Filter basket.
- 5 **Pre-Filter Basket:** A Pre-Filter basket must be installed into the pre-filter at all times.
- 6 **Pre-Filter Support Bar:** The support bar must be installed when attaching the Pre-Filter
- 7 **Running Trap:** The outlet of unit must be fitted with a running trap to reduce foul smells. A **3"/76mm** running trap can be made using a series of 90° elbows.
- 8 **FOG Container:** Ensure that the container is not restricted or blocked for daily maintenance.
- 9 **Hot Water Solenoid Valve:** Hot water must be connected to the unit using the **3/4" BSP (F/F)** Red PVC Hose provided, water supply must not exceed **3 bar** pressure and **60°C/140°F**. In the case of high pressure a pressure reducing valve must be used. Mains water connections must be made via a WRAS approved isolation valve which follows a WRAS approved double check valve.
- 10 **Power Lead:** The unit must be plugged into a **13 amp** rated **IP56** socket located below counter level.
- 11 **Interconnecting Pipework:** All pipework must be clipped and properly supported.

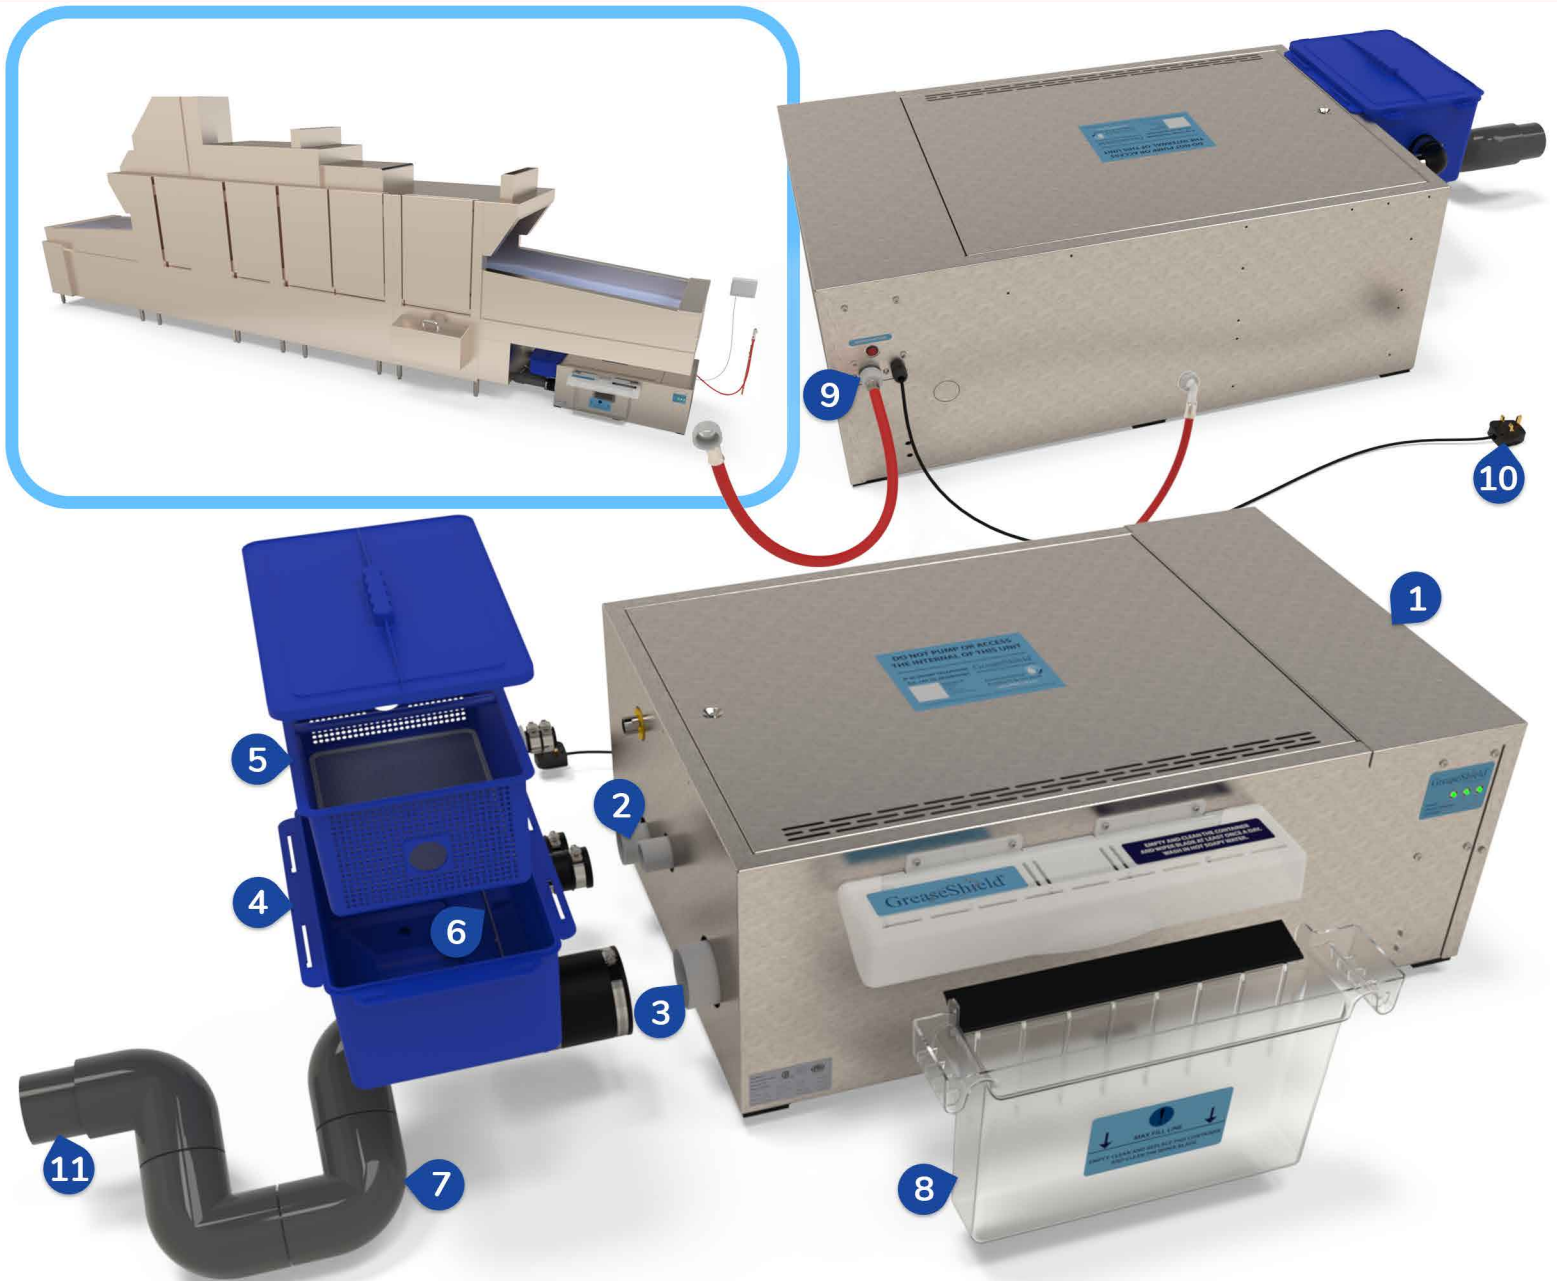

**Environmental  
Products and Services Ltd**

Award Winning Technology

V6 05/07/2021

[www.GreaseShield.com](http://www.GreaseShield.com)

HEAD OFFICE +44 (0) 28 3083 3081

[sales@epas-ltd.com](mailto:sales@epas-ltd.com)

GB OFFICE +44 (0) 161 477 5555

# Installation Guide - GreaseShield® 3000-DW



- Make sure the unit is installed on level ground or adjust the stand feet to ensure the unit is level.
- Have a hot water connection available to connect to the unit, if one is not available the unit must be equipped with a Genie H2O to give hot water on demand. Water connection must be made via a WRAS approved isolation valve **A** and double check valve **B**.
- Have an IP56 rated socket **C** below counter level available to the unit to plug into. If a genie H2O is required ensure an additional power supply (preferably a fuse spur) is available.
- Ensure all pipe work into and out of the unit has at least a 1 in 40 fall (downwards angle of 1.5°).
- Clean the Pre-Filter basket and FOG container daily.
- An Air Admittance Valve **D** must be installed after the running trap so a siphon doesn't occur.



**DO**



**DON'T**

- Place the unit in passageways where it can be a hazard or be damaged.
- Open the unit or insert hands into any part of the unit; moving parts can cause injury.
- Stand or place heavy objects on top of the unit.
- Dismantle the unit in any way, only qualified service staff are to access the inside of the unit.



**Environmental  
Products and Services Ltd**

Award Winning Technology

V6 05/07/2021

[www.GreaseShield.com](http://www.GreaseShield.com)

HEAD OFFICE +44 (0) 28 3083 3081

[sales@epas-ltd.com](mailto:sales@epas-ltd.com)

GB OFFICE +44 (0) 161 477 5555